

### Remote panel includes:

- Discharge air temperature selector
- Fan on/off switch
- Burner on/off switch
- Booth lights on/off switch
- Fan on, burner on and booth lights on indicator lights



1. Switch the fan on/off switch to on. If air handler is equipped with an inlet damper, the damper will begin to open. The Bananza supply fan start is delayed by a timer to allow the exhaust fan time to ramp up to prevent the booth doors from blowing open. If interlocked with an external exhaust fan, the exhaust fan will start as well. The fan on indicator light will illuminate.
2. To start the burner, switch the burner on/off switch to the on position. The burner control will sequence the burner on and burner indicator on light will illuminate.
3. Set the discharge air temperature selector to the desired temperature. The burner will modulate to maintain the discharge air temperature set point. The booth lights are turned on and off manually using the booth lights on/off switch.
4. To shut down, turn the burner on/off switch to the off position. Turn the fan on/off switch to the off position.